

FIG. 1

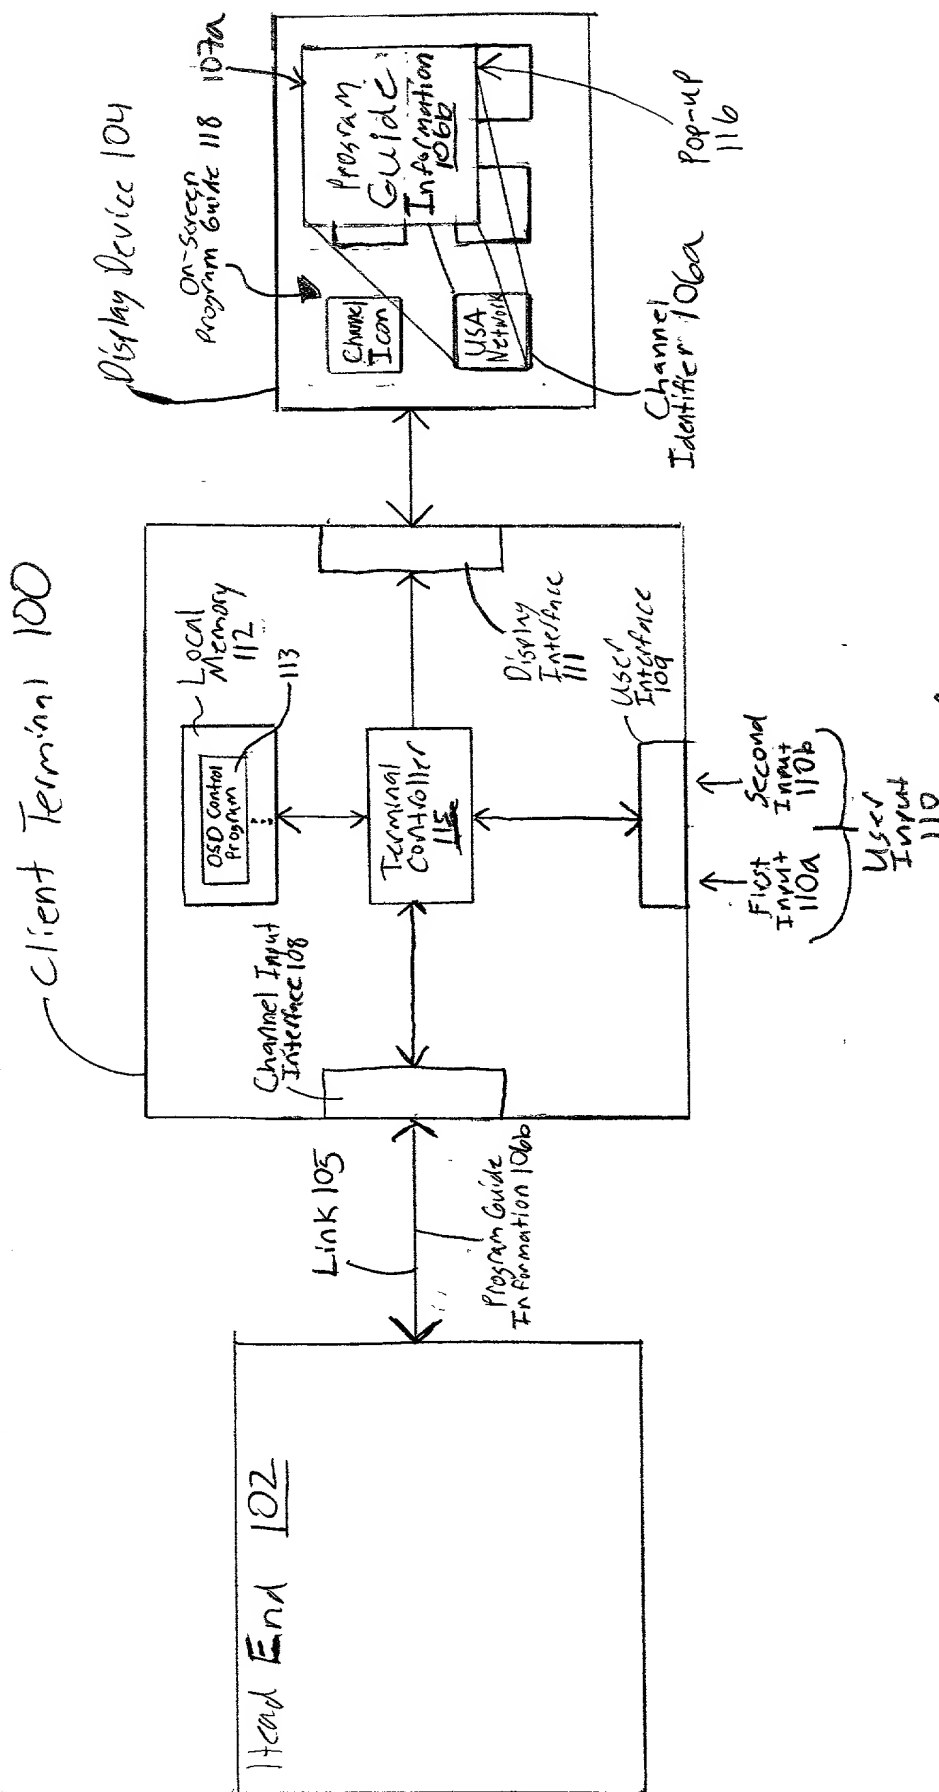


Figure 1

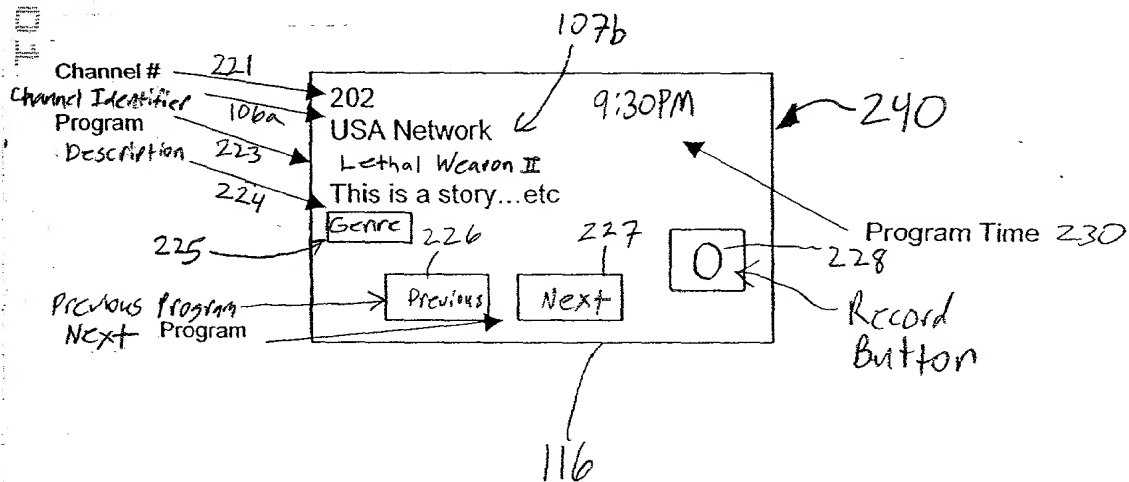
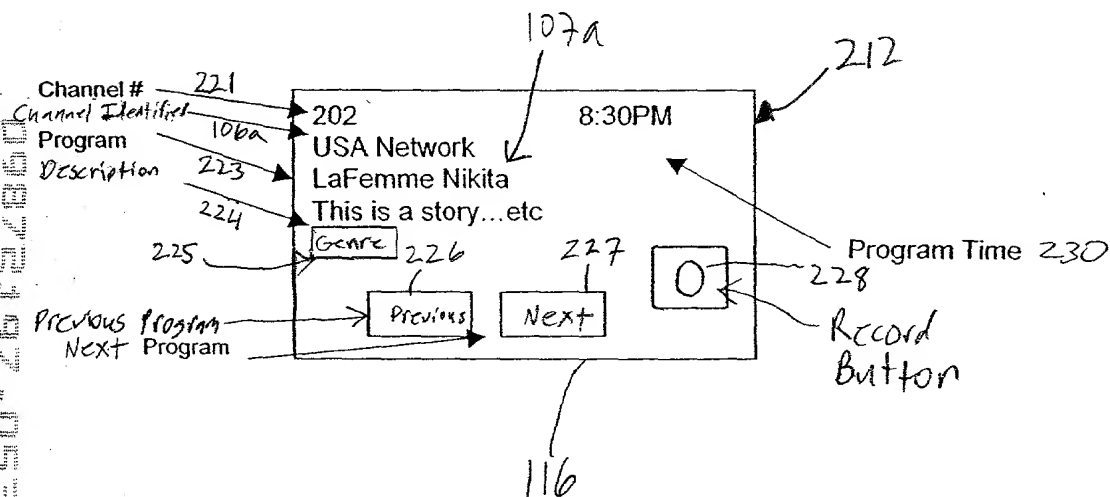
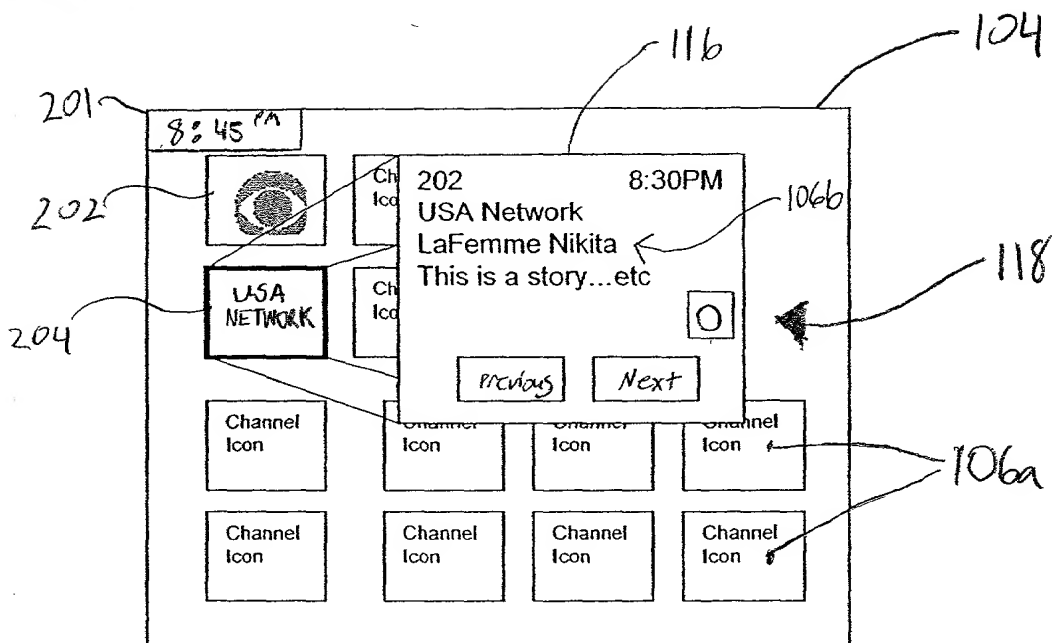


Figure 2

Method of Displaying
Program Guide Information
on a Display Device

300

Displaying Channel Identifiers on a
Display Device

310

Receiving a First Input to select
one of the Channel Identifiers

315

Display a Pop-up for the Selected Channel
Identifier on the Display Device that Includes
First Program Data

320

Receive
Second
Input (e.g. Next,
Previous)

325

YES

Display a Pop-up for
the Selected Channel
Identifier on the Display
Device that Includes
Second Program
Data

330

NO

Select
Another Channel
Identifier

335

YES

NO

Display
Selected
Channel

340

End

09872197-053401